




# 4081.74 1-inch Ball Mount for Steady Tray

## Instruction Manual

### Installation Procedure

1. Insert Allen Head Screw into top of Ball Mount.
2. Insert Ball Mount with Screw into Steady Tray Mounting Hole as shown. Guide Pin should line up with Guide Pin Hole.
3. Slide Nylon Washer and Split Lock-washer over Allen Screw.
4. Rotate Nut onto Allen Screw clockwise and tighten with an Open/Box End or Adjustable Wrench. Use Allen Wrench to keep Allen Head Screw from turning while tightening.

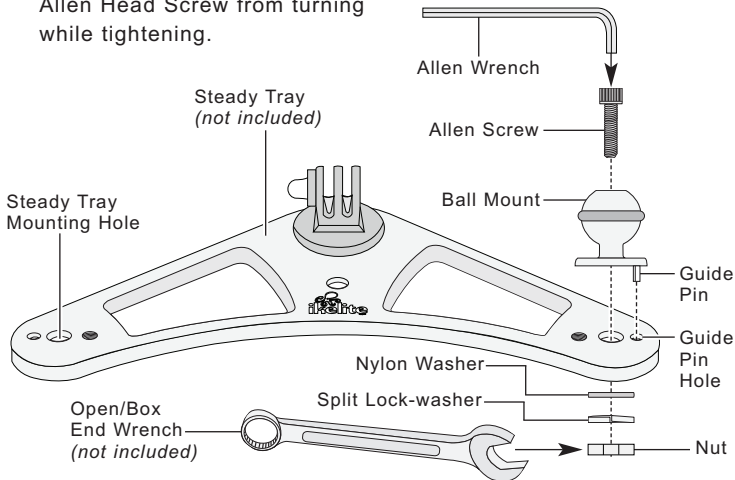



**Ikelite Underwater Systems  
50 West 33rd Street  
Indianapolis, IN 46208 USA**

**[ikelite.com](http://ikelite.com)**

© 2015 Ikelite Underwater Systems