

Ikelite

#9457.63 DS125/DS160/DS161 Substrobe Toggle

Replacement Instructions

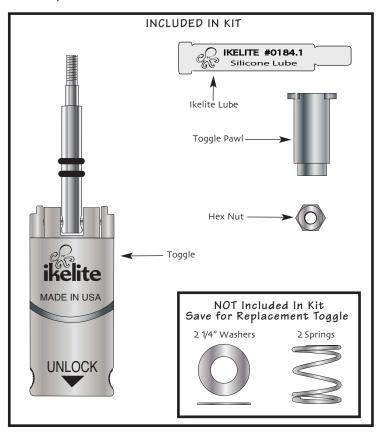

Replacement Procedure Illustrations

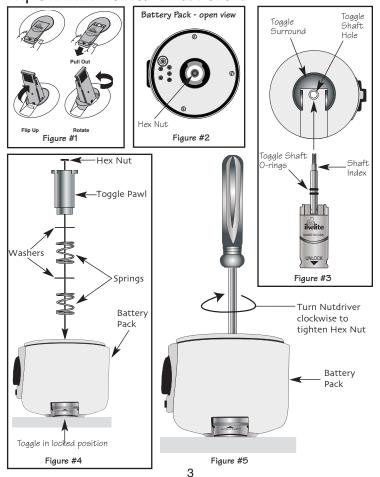

Replacement Procedure (illustrations on page #3):

- 1. Remove Battery pack from strobe (Figure #1).
- 2. Remove Hex Nut (Figures #2 and #5) using the Nut Driver. Discard old Toggle and old Toggle Pawl. Save Springs and Washers for new Toggle.
- 3. Clean Toggle Shaft Hole (Figure #3) using a cotton swab dipped in alcohol (preferred) or water. Allow to dry.
- 4. Lightly lubricate the toggle shaft o-rings with supplied lube. Make sure the Toggle Surround is positioned properly in the Battery Pack and install Toggle Shaft into Toggle Shaft Hole (Figure #3).
- 5. Move toggle to the closed position and place battery pack on a hard level surface (Figure #4).
- 6. Insert the old washers and springs over the toggle shaft as shown (Figure #4).
- 7. Insert the Toggle Pawl over the Toggle Shaft. Note that the Toggle Pawl is indexed to the Toggle Shaft. Press down and rotate the Toggle Pawl until it drops down into the Toggle Shaft index (Figure #3) position. The Toggle Pawl will be unable to rotate once it is properly seated. Continue pressing down on the Toggle Pawl with your thumb.
- 8. With your other hand, grab and drop the Hex Nut into the Toggle Pawl.
- 9. Insert the Nut Driver into the Toggle Pawl (Figure #5). Rotate the Nut Driver continuously until you feel the Hex Nut thread and tighten onto the Toggle Shaft.

NOTE: Hex Nut should be firmly snug, but do not over-tighten.

- 10. Make sure Battery Pack o-ring is clean.
- 11. Attach Battery Pack to Strobe

2

Ikelite Limited Warranty

All Ikelite products are warranted against any manufacturing defects for a period of one year from the original date of purchase. Defective products should be returned prepaid to Ikelite. Ikelite will, at its discretion, repair or replace such products, and will return to customer prepaid. All other claims, of any nature, including, but not limited to, bulb failure are not covered. Except as mentioned above, no other warranty, expressed or implied, applies to this Ikelite product.

Returning Products for Service

Ikelite is most interested in performing any service to assure that all products perform as intended. For repair or service, return the product to the address below with your name, address, phone number and a brief description of the problem. Evidence of purchase date must be provided to obtain warranty service.



Ikelite Underwater Systems

Attn: Repair Department 50 W 33rd Street Indianapolis, IN 46208 USA

317-923-4523 email: ikelite@ikelite.com www.ikelite.com